

Dimensions

Height 35 in. Height at arm rails 25 in. Length 3**1** in. Width 25 in.





Folding Size

Height 10 in. Length 36 in. Width 25 in.



Seat

Height: 20 in. (Floor to top seat) Depth: 15 in. Width: 16.5 in.





Specifications

Frame - 6061 Aluminum, Silver Anodized and Nylon Composite

Battery - 36V, 6.6 AH, 240 watt-hour, Lithium-Ion 4 lb. (1.8Kg) highest quality cells

Charger - 2.1A, Automatic, input 100-240V, charge time 4 hours or less

Arm Rests - Pre-attached and can be easily removed if needed for ease of transport

Motor - DC 36V, 250W, 7A

Max. Climbing Angle - 10 Degrees

Steering/Braking System - Two Lever Controls

Front Wheels - 6 Inch Non-Marking Solid

Rear Wheels - 9 Inch Non-Marking Air Filled (40PSI / 2.8BAR / 275kPa)

Turning Radius - 24 Inches

Weight Capacity - 300 lb. maximum capacity

Speed Range:

Low – (Indoor) 0-1 MPH Med – (Outdoor/Walking Pace) 0-3 MPH High – (Uneven Terrain) 0-6 MPH

Battery provides about 8 miles of operating range on a single charge.



The Zinger is all about convenience so taking it along couldn't be easier. It folds to 10" in less than a second and only weighs 47 pounds with the battery! And it's airline safe with its 240W Hour Lithium Battery.

Driving Zinger is easy! Push both levers down to go, pull both levers up to stop, and use alternate lever actions to turn. A trigger grip adjusts the speed within a Low, Medium, or High range. Low is perfect for around the house, and makes learning easy and safe. Medium allows up to 3 mph, great for keeping pace with a friend on foot. In High, the Zinger will do up to 6 **mph** to get you there quickly!

Navigate into small spaces with a 50% smaller turning radius than mobility scooters. Zinger has 24" turning radius.






It's not a Wheelchair... It's not a Power Chair... It's a Zinger!

Meet the future of personal transportation. Turns on a dime. Folds & unfolds in seconds. Fits in your vehicles trunk or back seat. Seats you at tables & desks like a normal chair. Fun to drive, too!

Available in

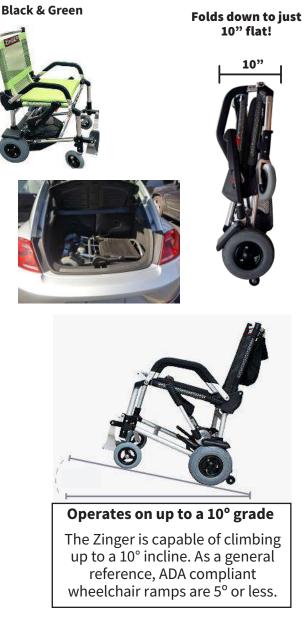

Note: The Zinger is not intended for use by disabled or handicapped individuals. Requires use of both hands/arms and is not intended for manual use.